



**MOTOROLA**



***User's Guide***

**BRAVO LX™**

# CONTENTS

	Page
Introduction.....	1
Controls .....	1
Turning Your Pager On .....	2
Turning Your Pager Off .....	2
Receiving and Reading Messages .....	3
Turning the Light On and Off .....	4
Changing Alert Modes .....	4
Selecting an Audible Alert .....	5
Setting the Time .....	5
Setting the Alarm .....	6
Setting the Date.....	6
Saving Messages .....	7
Erasing Messages .....	7
Selective Erasing of Messages .....	7
Effective Use of Your <i>BRAVO LX</i> Pager .....	8
Battery Information .....	8
Features .....	9
Cleaning Your <i>BRAVO LX</i> Pager .....	10
Repair and Maintenance .....	10
Patent Information .....	11

## INTRODUCTION

---

Congratulations on your purchase of a Motorola *BRAVO LX* pager. This compact pager uses many advances in electronic and wireless technology which allow you to receive numeric messages instantly and affordably.

## CONTROLS

---

### Buttons


- ⊖ On/Read/Select – turn pager on, read incoming messages, and select the function displayed.
- Backlight/Reset – turn the display light on and reset the pager to the standby screen, which shows time, date, alarm status, and alert status. Press ■ twice to reset to the standby screen.
- Ⓜ Menu - scroll through the menu.

After performing any pager function described in this user's guide (setting the time, date, alarm, and so on), your *BRAVO LX* pager automatically returns to the standby screen and activates the selections you made.

### Function Indicators

- 🔇 Silent Alert – the pager alerts without audible alerts for incoming messages.
- 🔊 Audible Alert – one of several pleasing audible alerts sound for an incoming message.
- 🕒 Alarm – the alarm alerts you at the set time.
- 🔒 Message Lock – this message is locked against deletion.
- ▶ Continuous Message – more message information is on the next screen.

On/Read/Select  
Button

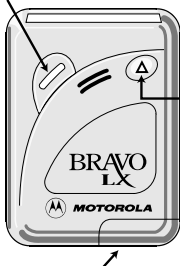

Backlight/Reset  
Button(■)

Menu Button

Battery Door  
Lock (Slide up  
to unlock, down  
to lock)

Slide battery door to the right  
(Insert positive end of battery first) ACPB-952424-O

## TURNING YOUR PAGER ON

Press  $\ominus$  to turn your pager on.

Your pager gives an alert by either a sound or a vibration, indicating it is on. After displaying the power-up screen, the time of day, the date, and an alert indicator are shown on the standby screen.

## TURNING YOUR PAGER OFF

- 1 Press  $\triangle$  until *PAGER OFF?* is displayed.
- 2 Press  $\ominus$  to turn your pager off.

**NOTE:** The pager displays the time and date, but not an alert mode indicator. If the alarm is set, the alarm indicator  $\blacksquare$  remains on the screen when the pager is off.

## RECEIVING AND READING MESSAGES

Your *BRAVO LX* pager can receive up to sixteen 20-character messages. When a message is received, the pager alerts for eight seconds.

- ① Press any button to stop the alert.
- ② Press  $\ominus$  to display the message.
- ③ Press  $\blacksquare$  twice while reading your message to return to the standby screen.


Messages longer than 12 characters display on a second screen, indicated by the  $\blacktriangleright$  symbol. Press  $\ominus$  to display the second screen. The second screen is displayed automatically after one minute, even if  $\ominus$  is not pressed.

The last screen of your message displays the message slot number and the time received.

If a message is not read, the pager gives a reminder alert every two minutes and the screen displays the number of unread messages (i.e., 1 Page, 2 Pages) until all messages are read.

If the pager receives more messages than its available memory can hold, the new message replaces the oldest read, unlocked message.

An overflow condition occurs when all message slots are filled with unread messages and a new message is received. Upon receipt of a message, while the pager is in the overflow condition, the oldest unread message is discarded. In this mode, the overflow indicator replaces the default idle display with *OVERFLOW*. Messages must be read and erased to clear the overflow display.

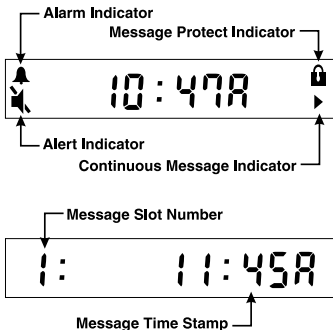

## TURNING THE LIGHT ON AND OFF

- ❶ Press ■ to turn the light on.
- ❷ To turn the light off, press ■ again. The light turns off automatically two seconds after returning to the standby screen.

## CHANGING ALERT MODES

- ❶ Press Ⓢ. Either *SILENT P* or *AUDIBLE P* is displayed, depending on the current mode.
- ❷ If *AUDIBLE P* is displayed, the pager is in "Silent" mode. Press Ⓢ to change to "Audible" mode. The pager chirps.

- 3 If **SILENT**  $\bar{P}$  is displayed, the pager is in "Audible" mode. Press  $\ominus$  to change to "Silent" mode. The pager vibrates.

For your pager to vibrate when a message is received, it must be in "Silent" mode.

## SELECTING AN AUDIBLE ALERT

- 1 Press  $\triangle$  until **SET ALERT**  $\bar{P}$  is displayed.
- 2 Press  $\ominus$ . The current alert number is displayed, for example: **ALERT 3**, and the pager gives a sample of the alert tone.
- 3 Press  $\triangle$  until the desired alert type is displayed. As each alert number is displayed, the pager gives a sample of the alert tone.
- 4 Press  $\ominus$  to select the alert number, set the alert tone to be used, and return to the standby screen. When messages are received, your pager gives the selected alert only when in the audible mode  $\blacktriangleleft$ .

## SETTING THE TIME

- 1 Press  $\triangle$  until **SET TIME**  $\bar{P}$  is displayed.
- 2 Press  $\ominus$  to set the time. The hour flashes.
- 3 Press  $\triangle$  to change the hour. Press  $\ominus$  to switch to the minutes. The first digit of the minutes flashes.
- 4 Press  $\triangle$  to change the first minute digit. Press  $\ominus$  to switch to the second digit. The second digit of the minutes flashes.
- 5 Press  $\triangle$  to change the second minute digit. Press  $\ominus$  to switch to AM/PM. The **A** or **P** flashes.
- 6 Press  $\triangle$  to change AM/PM.

- 7 Press  $\ominus$  to display the 12/24 hour screen.
- 8 Press  $\triangle$  to change the 12/24 hour mode.
- 9 Press  $\blacksquare$  twice to return to the standby screen.

## SETTING THE ALARM

- 1 Press  $\triangle$  until  $SET\ ALARM\ ?$  is displayed.
- 2 Press  $\ominus$  to select the alarm on/off sequence.  $ON$  or  $OFF$  flashes.
- 3 Press  $\triangle$  to turn the alarm on or off. Press  $\ominus$  to switch to the hours. The hour flashes.
- 4 Press  $\triangle$  to change the hour. Press  $\ominus$  to switch to the minutes. The first digit of the minutes flashes.
- 5 Press  $\triangle$  to change the first minute digit. Press  $\ominus$  to switch to the second digit. The second digit of the minutes flashes.
- 6 Press  $\triangle$  to change the second minute digit. Press  $\ominus$  to switch to AM/PM. The  $A$  or  $P$  flashes.
- 7 Press  $\triangle$  to change AM/PM.
- 8 Press  $\blacksquare$  twice to return to the standby screen.

Note: Steps 6 and 7 apply when in the 12 hour mode.

The symbol  $\uparrow$  is displayed when the alarm is turned on. The pager vibrates or gives a 20-second alert and  $ALARM$  is displayed at the selected time.

If set, the alarm activates even when the pager is off. Press any button to stop the alarm alert.

## SETTING THE DATE

- 1 Press  $\triangle$  until  $SET\ DATE\ ?$  is displayed.
- 2 Press  $\ominus$ . The month flashes.



- ③ Press  $\Delta$  until the desired month is displayed. Press  $\ominus$  to switch to the day. The day flashes.
- ④ Press  $\Delta$  until the desired day is displayed. Press  $\ominus$  to repeat setting the date, if needed.
- ⑤ Press ■ twice to return to the standby screen.

## SAVING MESSAGES

---

- ① To save a message, press  $\Delta$  while reading your message. The prompt *PROTECT ?* is displayed.
- ② Press  $\ominus$  to protect the message. The symbol  $\mathfrak{A}$  indicates that your message is saved.
- ③ Press  $\Delta$  while reading the saved message to remove the protection. The prompt *UNPROTECT ?* is displayed.
- ④ Press  $\ominus$  to remove the protection. The symbol  $\mathfrak{A}$  is removed from the screen.

Saved messages cannot be erased or overwritten by new messages when memory is full. You can save up to eight messages.

## ERASING MESSAGES

---


- ① Press  $\Delta$  until *ERASE ALL?* is displayed.
- ② Press  $\ominus$ . Your read, unprotected messages are erased. The pager returns to the standby screen.

The *ERASE ALL?* prompt is displayed only if there are read messages in memory.

## SELECTIVE ERASING OF MESSAGES

---

- ① Press  $\Delta$  twice while reading a message and the *DELETE ?* prompt is displayed.

- ② Press  to delete the message and return to the standby screen.

Only unprotected messages can be deleted.

## **EFFECTIVE USE OF YOUR *BRAVO LX* PAGER**

Your *BRAVO LX* pager can help you keep in contact with everyone important to you. . . children or child care providers, business office, data services, and voice mail. Be sure that your children's school, physician, and friends have the number to contact you in emergencies.

Give your pager number to family, friends, and associates to assure contact at any time, any place. When they call your pager number, they enter the number where they can be reached on a tone-type telephone. This number is then displayed on your *BRAVO LX* pager.

If you have a cellular phone, give your pager number instead of your cellular number. Then you can decide whom to call back, without paying for incoming cellular calls. Your *BRAVO LX* pager can help reduce your monthly cellular phone bill!

## **BATTERY INFORMATION**

Your *BRAVO LX* pager is designed to operate with an AAA-size alkaline battery. See diagram on page 2 for the battery door location. If detached from the pager, the hinged battery door can be easily snapped back into place.

## FEATURES

---

**Backlight:** In low-light conditions, the backlight makes the screen easy to read.

**Duplicate Messages:** If the same message is received more than once, *DUPLICATE* is displayed at the beginning of the latest message. This message contains the latest timestamp and prevents a repeated message from taking an extra memory slot.

**Low Battery Indicator:** When battery power reaches low levels, *LOW CELL* is displayed, prompting you to change the battery. All pager alerts change to two seconds in length.

**Message Erase:** Messages can be erased all at once or selectively at your choice to free space in memory.

**Memory Retention:** All messages remain in memory, even when the pager is off and while the battery is being replaced.

**Memory Capacity:** The *BRAVO LX* pager can store up to sixteen 20-character messages, for a total of 320 characters.

**Message Protect:** You can protect up to eight messages stored in the pager memory.

**Overflow:** *OVERFLOW* is displayed when more unread messages are received than the available message memory can hold. After you read all of your unread messages, the standby screen is displayed.

**Automatic Alert Reset:** The pager alerts automatically stop, even if no buttons are pressed.

**Personal Alarm:** This alarm can be set to alert you. The alarm works even when the pager is off.

**Reminder Alert:** The pager chirps or vibrates every two minutes until you read all unread messages.

**Standby Screen:** The standby screen displays the time of day/date and the indicators.

**Time of Day and Day/Month:** The time of day and the date display whether the pager is on or off.

**Timestamp:** The time of day a message is received is displayed on the last screen of each message.

**User Selectable Audible Alerts:** A selection of five alert tones gives you a choice of message alerts heard when you are paged in the audible alert mode ◀.

## **CLEANING YOUR *BRAVO LX* PAGER**

---

To clean the pager housing, use a soft, nonabrasive cloth moistened in a mild soap and water solution. Wipe the surface using a second cloth moistened in clean water. **Do not place in water. Do not use alcohol or other cleaning solutions.**

## **REPAIR AND MAINTENANCE**

---

Your *BRAVO LX* pager, properly handled, is capable of many years of trouble-free service. However, if service is required, Motorola's Service Organization, staffed with specially trained technicians, offers conveniently located repair and maintenance facilities throughout the country. Please contact your paging service representative or a Motorola sales office for more information.

## **PATENT INFORMATION**

---

This Motorola product is manufactured under one or more Motorola U.S. patents. A partial listing of these patents is provided on the underside of the belt clip and on the inside surface of the back cover of the product. Other U.S. patents covering this product are pending.

## NOTES

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

## NOTES

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

Ⓜ, Motorola, *BRAVO LX* are trademarks or registered trademarks of Motorola, Inc.

© 1995 by Motorola, Inc.  
All Rights Reserved.

Paging Products Group  
1500 Gateway Blvd., Boynton Beach, FL 33426-8292  
Printed in U.S.A. 10/95



6881024B95-O